

Instructions for Installation of Skirting Covers

1. Atmosphere & Surface


Storage conditions: store profiles and adhesives at room temperature.
Ensure surfaces are clean and dry before installation.

2. Adhesives

Use the Fix Power Adhesive for bonding to the wall, the Fix Ultra Jointing adhesive for mitre joints and but joints between mouldings. The Fix Filler can be used to touch up gaps in the joins.



Please note the maximum dimensions of the old skirting board!


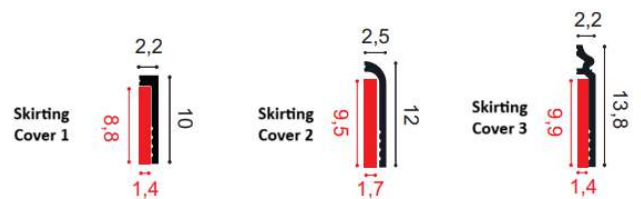


Mark




Mitre

2a Inside corner

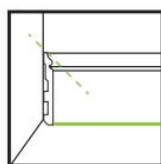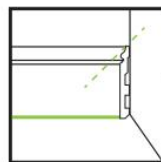

2b Outside corner

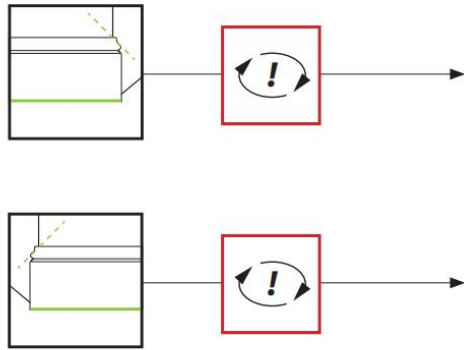

Position and finish

3 DecoFix POWER

Apply DecoFix Power on the gluing surfaces. If the gap between the new and old skirting is large, apply thick dabs

4

Push firmly

5

Clean excess adhesive with soap solution

6 DecoFix ULTRA

Use DecoFix Ultra in every joint

7

Firmly press together until some adhesive slightly spills out. Do not push all of the glue out of the joint. Maintain a small gap

8

Clean excess adhesive with a painter's knife and soapy water within 10min

9 DecoFiller

Use DecoFiller to smooth out the visible joints, clean with water

10

Paint with a suitable paint. No sanding required

Painting & Maintenance

Our products are supplied with a matte primed surface. For optimal results, use water-based paint and always follow the paint supplier's instructions as well as the paint manufacturer's priming instructions. Please note that full UV-stability is achieved only after the final coat of paint has been applied. We recommend testing the paint on a small sample before beginning the full application. Flexible profiles should be painted after installation using a paint with good elasticity. All products can be fully repainted, and any imperfections can be repaired with the Fix Filler. They are resistant to most common cleaning detergents and moisture.