


Quartz Effect Profiles Installation




1) Cut to Size

Façade profiles can be cut to the desired dimensions with the help of a mitre saw, for cutting at the correct angle.

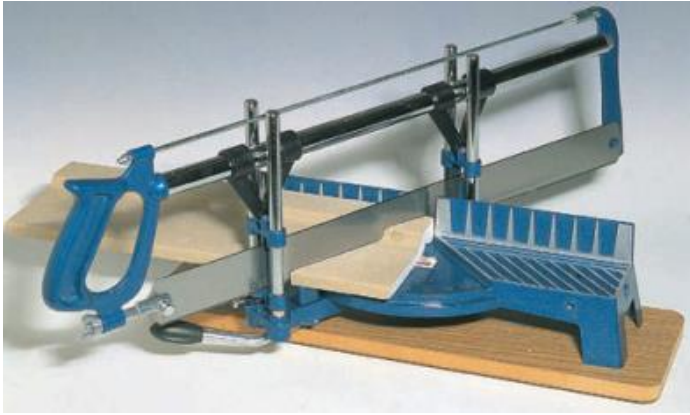


2) Fitting to wall

The profiles are glued to the surface of the wall with Fixing Adhesive. Apply to the entire back of the profile, and press to the surface of the wall. This may need to be supported in place while the adhesive takes. For corners, the profiles will be cut at a 45 degree angle, and the sections will be glued with grout.

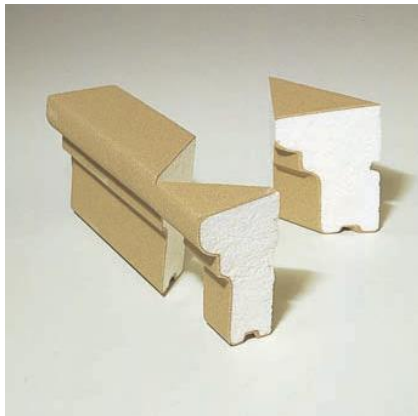

3) Corner Joints

At the corner joints, apply adhesive between the two surfaces of the sections to bond, and then touch up with grout. For fitting window Cills, it is recommended that the Window Cills project 20 to 30mm either side of the Window Frame moulding.

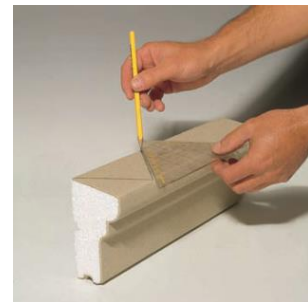

4) Fitting of Window Cills

The resulting profile can be mounted after the drying period under the window board.

The profiles can be either left unpainted, or for a different colour, can be painted with exterior grade paint.

